

AROMA DIFFUSER C100 Pro

PRODUCT MANUAL

Optional Screen control/Bluetooth

ACCESSORIES: Product manual, Warranty card, Certification.

Before using product, please read this instructions carefully and safe-keeping.

Notes:

- Do not disassemble the device by yourself;
- It is strictly forbidden to tilt or invert the equipment that is working and contains essential oils;
- Do not use other non-standard power supplies. The device only supports DC 5V adapters, otherwise the device will be damaged.
- Do not use this equipment in extreme environments such as high temperature, excessive humidity, and excessive humidity;
- Do not install/place the device in an area where children can easily reach;
- Do not place the device in an area with poor signal to prevent the device from being connected due to problems.
- The Bluetooth connection is recommended to be within five meters to ensure stable data transmission;
- Do not add essential oil from the fogging place, otherwise the machine will not be atomized normally, and the serious situation will cause damage to the machine;
- When replacing essential oils, please pay attention to whether the gasket at the bottle mouth installation is off or damaged. If it is off or damaged, it should be replaced in time;
- If the machine is not used for a long time, remove the essential oil and unplug the power supply;
- Since the device itself has a certain weight, please do not install the device in an unstable place to prevent the device from falling.
- It is recommended to clean or replace the atomization core every 3 months

COMMON TROUBLESHOOTING

| Malfunction | Exclude |
|---------------------------------|---|
| No atomization | Whether the power supply is connected, air pump is damaged, and the equipment is in working. |
| Small amount of atomization | Whether the atomization core is blocked or not, and the cleaning equipment confirms; whether the air pump is aging. |
| Fragrance spray spouting liquid | Whether the equipment is tilted, and essential oil in the bottle overflows the atomizing core. |
| Essential oil leak | Whether the essential oil bottle is loose, gasket at the mouth of the bottle is damaged, and atomizing head is damaged. |
| The device emits abnormal noise | Whether the air pump is damaged, check whether there is air outlet or abnormal vibration. |
| Can't connect to device | Whether the positioning and Bluetooth permissions of mobile phones and apps are enabled; Bluetooth connected devices: Is the phone too far away from the device; |

PRODUCT PARAMETERS


| Size | 150mm*67mm*150mm | Characteristic | Screen Display/Button control/APP control/Low noise/Large-capacity |
|---------------|-----------------------|------------------------|--|
| Rated voltage | DC5V/D-size battery*3 | Weight | 370g |
| Power | 2W | Coverage | 100-500m ³ |
| Atomization | 1.0g/h | Essential oil capacity | 150ml |

CONCENTRATION AND CONSUMPTION


| C100pro | Grade | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 |
|---------|-------------------------|-----|-----|-----|-----|-----|-----|-----|-----|-----|----|
| | Working time(s) | 5 | 5 | 5 | 5 | 5 | 5 | 5 | 5 | 5 | 5 |
| | Interval(s) | 245 | 120 | 78 | 58 | 45 | 37 | 30 | 26 | 23 | 20 |
| | Atomization amount(g/h) | 0.1 | 0.2 | 0.3 | 0.4 | 0.5 | 0.6 | 0.7 | 0.8 | 0.9 | 1 |

The above is specific essential oil data for laboratory environment testing, for reference only

Panel Description

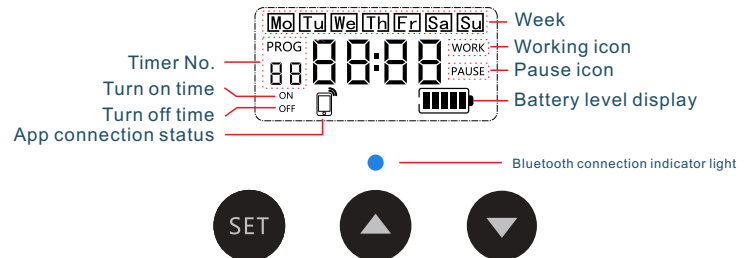

PANEL AND OPERATION INSTRUCTIONS

 


A-Start Page

- Turn on and display the current device clock/week, device atomization/pause, Battery level status
- Long press ▼ to enter Standby page(Press SET can return)
- Tap ▲ to quickly enter and adjust the current Nebulization concentration setting page



B-Standby page

 - [Page A] Automatically enter without operation for 10 seconds
- Backlight off
- Display the current device operation number during the time period.Fog/pause countdown seconds
- Only display OFF outside the time period
- Tap SET to return to page A



C-Clock Settings Page

- [Page A] Long press SET to enter
- Tap SET to select the adjustment position
- Tap ▼ / ▲ Adjust Values
- Long press SET to save and return to page A



 
D-Timer No. selection page

- [Page A] Tap SET to enter
- Tap ▼ / ▲ adjust the serial number,Not displaying (ON/OFF) indicates that the sequence number is timed No data set for device
- Long press ▼ to delete the timer data
- Tap SET to adjust the timer data



E-Time period setting page

- [D Page] Tap SET to enter
- Tap SET to select the adjustment position
- Tap ▼ / ▲ Adjust Values



F-Weekday selection page

- [E Page] Tap SET to enter
- Tap ▼ to select the adjustment position
- Tap ▲ to adjust values (framed as weekdays)



G-Concentration ratio setting page

- [F Page] Tap SET to enter
- Tap ▼ / ▲ Adjust Values
- Tap SET to switch between "WORK" and "PAUSE" Or return to page D




H-APP Connected
-Locked screen page


- Locked or connected by mobile app Bluetooth automatic entry
- Flashing indicates that the screen has been locked by the APP
- OFF Display indicates that the device is in the non working timer

[C/D/E/F/G Page] You can long press SET to save data and return to [A Page]

REPLACE ESSENTIAL OIL

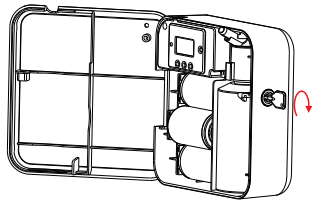


Open the front cover with the key and remove the atomizer head and essential oil bottle as a whole. Unscrew the essential oil bottle for refilling or replace it.

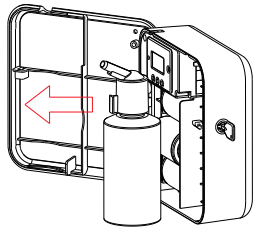


Essential oil bottle:
Clockwise: Loosen
Counterclockwise: Tighten

HOW TO INSTALL

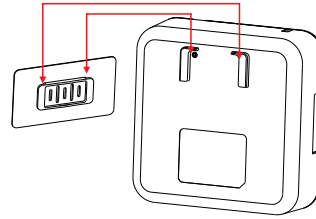


1. Tear off the film from the wall hanging parts, stick them onto smooth walls (glass, wood, tiles, walls, elevator cars, etc.) and press them firmly.
2. Align the back of the body with the wall hanging component and secure it in place from top to bottom.

3. Anti theft screws: Remove the atomizing head and turn the loose screw in the picture clockwise 3-4 times (note not to tighten it forcefully), and the body can be fixed on the wall hanging part.

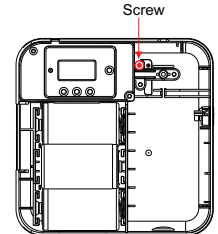

PRODUCT OVERVIEW

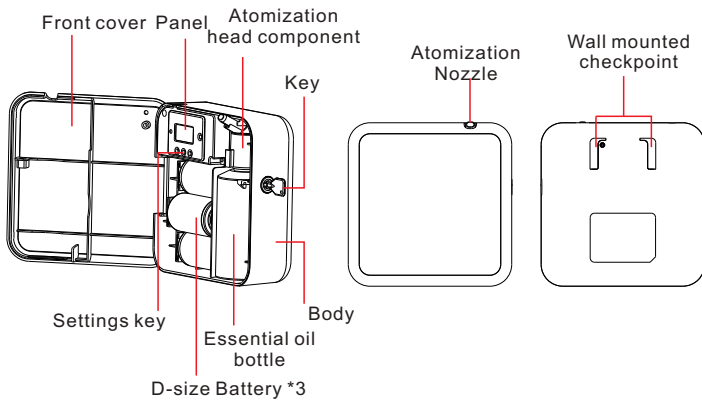

Power interface (the device does not have charging function, please remove the battery compartment battery when using an external power source), Do not connect the power source while the battery is installed to avoid danger caused by battery damage.

APP DOWNLOAD QR CODE AND OPERATION



APP download QR code



APP operation guide

WARRANTY CARD

1. Any belongs to under normal usage circumstance cause because of the product's own quality, customers can bring the card and the machine get the free repair from our company.
2. In normal use conditions, for the causes of manufacturer's fault, we will offer warranty. There is one year warranty since purchase date.
3. The following are no warranty services:
 - The damage caused by natural disaster and accident (For example: Conflagration, Earthquake and so on);
 - Don't according to the operational requirement to use;
 - The damage caused by transport improper;
 - Can't provide the warranty card or certificate of content be altered.
4. If maintenance, the guarantee of quality assurance and obligations, the time limit according to the warranty card.

● Maintenance records

| Maintenance Date | Maintenance Organisation | Maintenance item | Serviceman |
|------------------|--------------------------|------------------|------------|
| | | | |
| | | | |
| | | | |

Since the date of sale, the product will be free of charge for one year, beyond the scope of warranty, paid maintenance, and lifetime maintenance.

CERTIFICATION

Product Name: Aroma Diffuser
 Model: C100 Pro
 Grade: First Class
 Place of Origin: Guangzhou, China
 Inspectors: _____
 Production Date: _____