

SCENT DELIVERY SYSTEM

PRODUCT MANUAL

Before using product, please read this instructions carefully and safe-keeping

Don't use the overladen Power socket,
power wire and broken power wire plugs,
don't try to open the product, If happen
abnormal phenomenon, Please contact with
the relevant Technical department,
If lightning and thunder, please do not touch
the power supply cable.

CATALOGUE

BASIC PARAMETERS-----01

INSPECTION EQUIPMENT -----01

APPLICATION ENVIRONMENT-----02

FUNCTION AND CHARACTERISTICS-----03

METHOD OF USE-----04

SETTING PANEL-----08

LOCAL TIME & DAY SETTING-----09

PROGRAM SETTING-----10

CONCENTRATION SETTING-----11

RESTORE FACTORY SETTINGS-----12

 










EQUIPMENT CLEANING-----13

COMMON FAULTS AND EXCLUSION-----14


BASIC PARAMETERS

Model	F5000
Dimensions	300*132*180mm
Upply Voltage	AC 110V / 220V
Total Power	20W
Coverage Area	5000m ³

INSPECTION EQUIPMENT

Name	Sample	Quantity
Scent Machine		1
Power adapter		1
Bracket		1
Atomized Head		1
Oil Bottle		1
Tube	 ø6mm	1
	ø16mm	1
Manual		1
Bottle Cap		1
HVAC connector		3
HVAC connector		1
Sealing Tape		1

Simple and convenient installation, suitable for shopping malls, hotels, exhibition centers, waiting hall, airport and other large places.

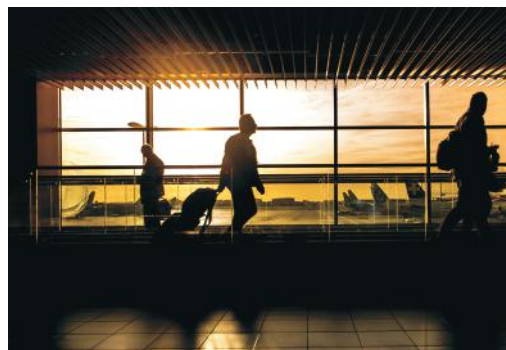

Function:

Scent Delivery System was designed and made by the principles of Micro spray, it collects the high-tech quality.



24 hours on / off timer



Fragrance concentration can be adjusted.



Automatic mode



Using advanced nano technology to produce micro essential oil particles, no residue.



We have international testing certification for our energy saving products. Creating healthier green environment.



Noise reduction design



Strong rapid atomization



Programming ensure working life span of machine.



User-friendly design, easy to install




Atomization at room temperature, the flavor is more natural




Fragrance distribution, and stay for a long time


A/C Installation Diagram

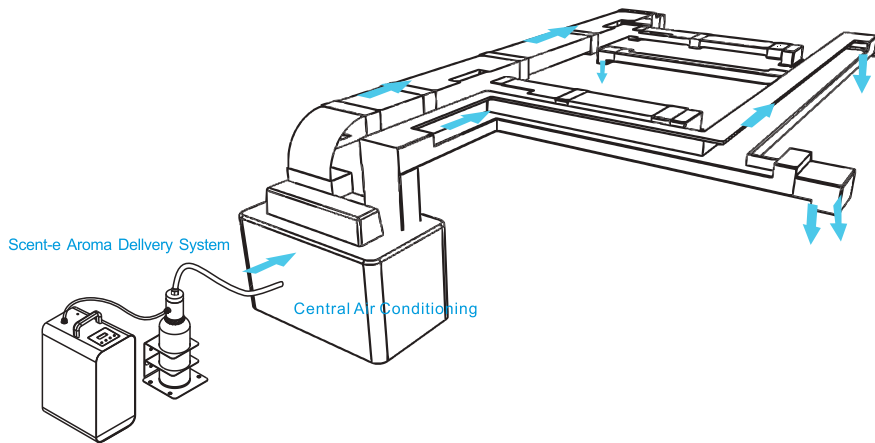


HVAC Installation Diagrams in a mechanical room. HVAC Scenting

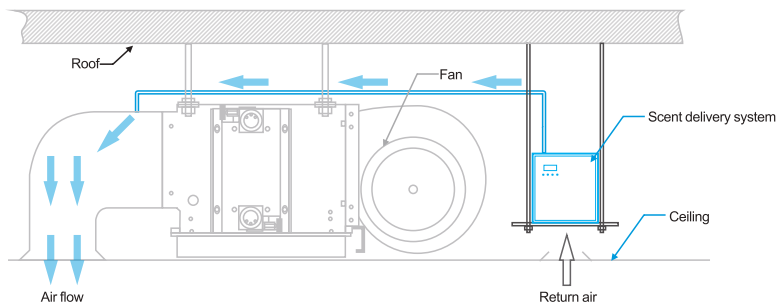

Remove the device, connect the adapter to top of the machine and atomized head.

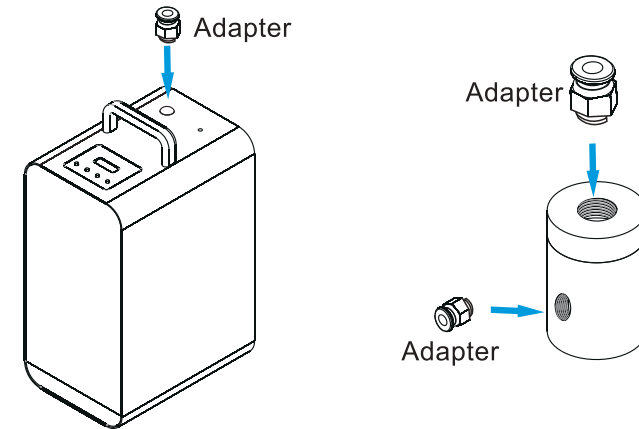


Remove the atomizing head and screw it into the oil bottle with essential oil, install the bracket and fix the oil bottle.

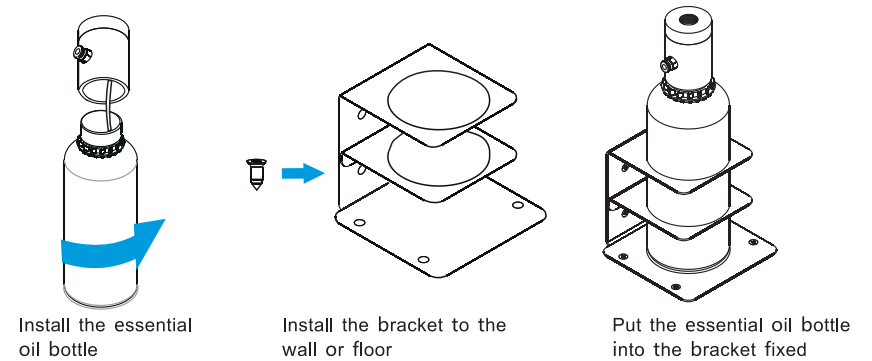


METHOD OF USE

Connect the machine and atomized head with 6mm plastic pipe

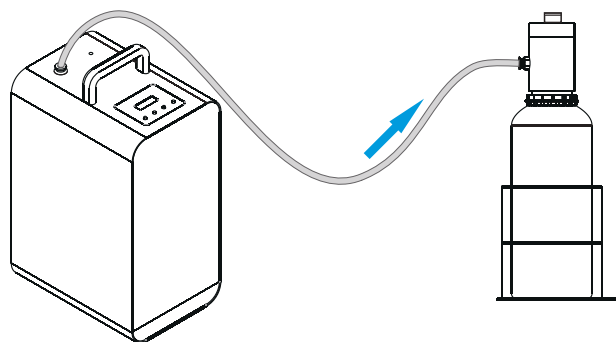


Connect the atomized head adapter to the HVAC with 12mm plastic pipe

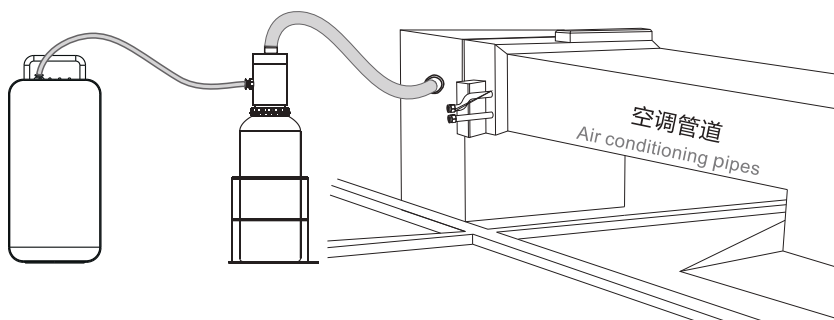


METHOD OF USE

Connecting the power, when the indicator turns green, equipment starts to work.

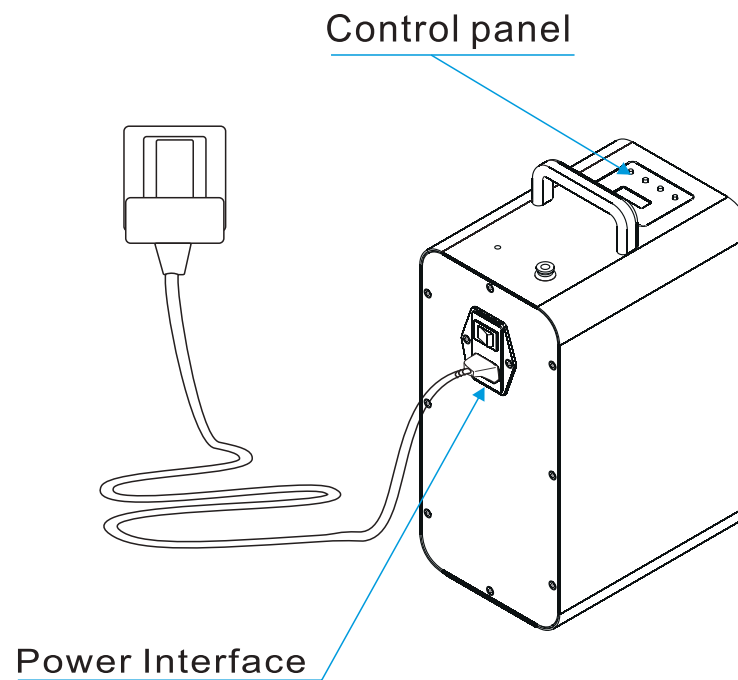


SETTING PANEL

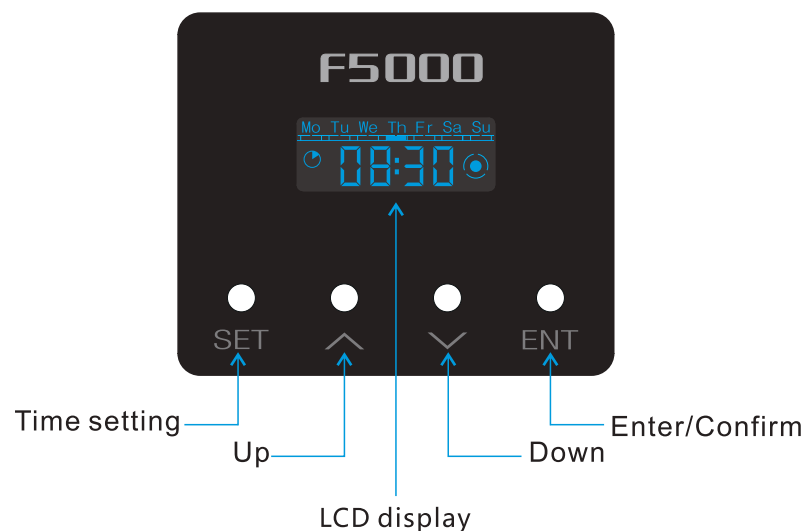



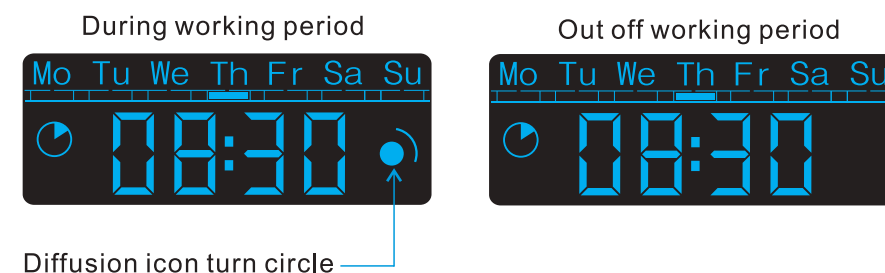


SETTING PANEL


The screen lights off and the machine will be locked in about 20 seconds if no operation, Button **SET**, the screen will automatically unlock.



 LOCAL TIME & DAY SETTING





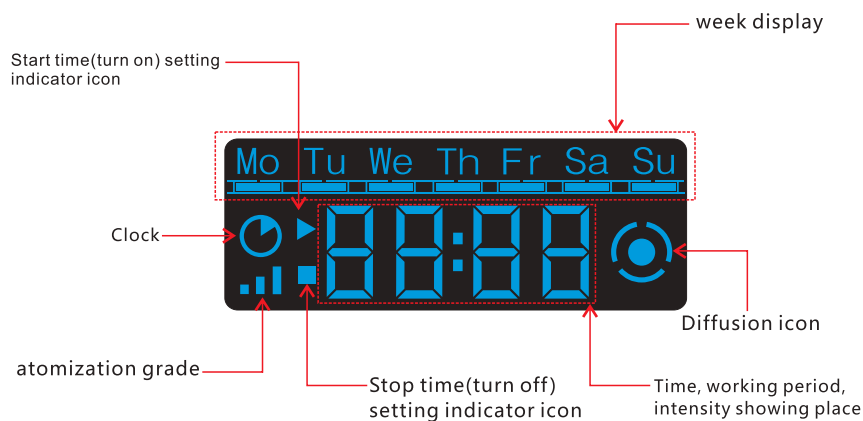






Local time setting

- 1). Touch button **SET** (3 seconds) till hear "beep" noise, the LCD display shows  we can touch  button to adjust the week(local day),
- 2). Touch  button the clock will be flashing, then we can adjust the current time, start pressing  to set either hour or minutes and pressing  to set to local time, press **ENT** to confirm the setting.







PROGRAM SETTING

Diffusion day and diffusion time setting

- 1) Touch button **SET** hear "beep" sound, the LCD display shows , touch  to choose the diffusion day (this system is provided with 3 choices: Monday to Friday; Monday to Saturday; Monday to Sunday);
- 2) Touch button **SET** the display shows  goes into the first working period setting;
- 3) Touch button **SET** again, the display shows , then touch , the time number is blinking, then we can start touching  to set either hour or minutes and touching  to set the start time (turn on), press **ENT** to confirm the setting.
- 4) Touch button **SET**, the display shows , touch , the time number is blinking, then we can start touching  to set either hour or minutes and touching  to set the stop time (turn off), press **ENT** to confirm the setting.
- 5) The diffuser has 5 sets of programming (working period) that allows you to adjust the operating hours of the unit according to your need, the setting way is the same as the first set working period.

CONCENTRATION SETTING



During the working period, we can touch  or  to check the fragrance intensity, and touch  to increase the intensity, touch  to decrease the intensity, final touch button **ENT** to save the setting and exit.

F5000 Essential oil consumption


Gear	Atomization amount 1h/g	Atomization gear time ratio Unit(Second)	Gear	Atomization amount 1h/g	Atomization gear time ratio Unit(Second)
1	0.5	10-200	11	5.5	110-100
2	1	20-190	12	6	120-90
3	1.5	30-180	13	6.5	130-80
4	2	40-170	14	7	140-70
5	2.5	50-160	15	7.5	150-60
6	3	60-150	16	8	160-50
7	3.5	70-140	17	8.5	170-40
8	4	80-130	18	9	180-30
9	4.5	90-120	19	9.5	190-20
10	5	100-110	20	10	200-10

RESTORE FACTORY SETTINGS



Touch button **ENT** (about 3 seconds) till comes a lasting "beep" noise, can restore factory settings. (factory settings: Local day--Sunday, local time: 12:00; Working day--Monday to Sunday; Working period--7am to 9pm, only one set working period.)

CARE INSTRUCTION

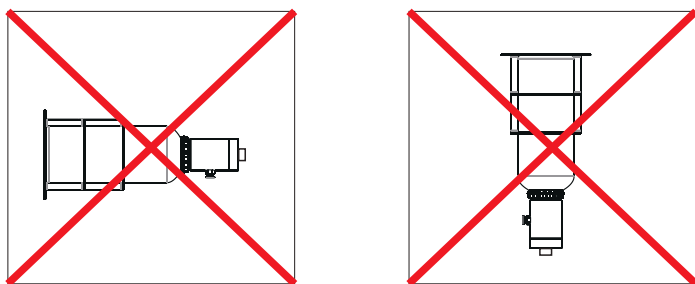


After connect the essential oil bottle into the atomization head, do not tilt or lay down the oil bottle, so as to avoid oil leakage, affecting the normal use, and cause unnecessary waste.

EQUIPMENT CLEANING


Every time when make a replacement of fragrance or after some time operations, the fragrances smoke come out from the nebulizer are less than before, we need to do a cleaning and maintenance.

Cleaning steps:

Carefully open the equipment and take out the fragrance bottle, which the fragrances have been run out.

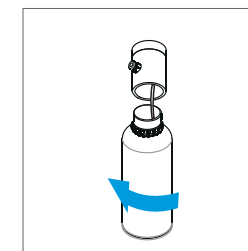

Put some alcohol into the bottle again, then install it on the equipment, and then turn on the equipment let it work for 5-10 minutes.

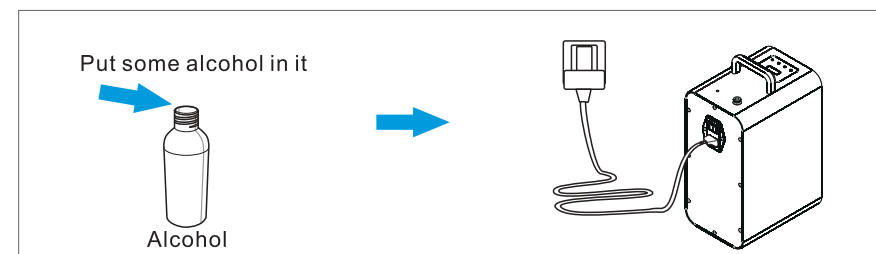

- After cleaning, turn off the equipment.
- Take out the fragrance bottle again, and make a replacement of fragrance that you like, finally install on the machine carefully.

COMMON FAULTS AND EXCLUSION

FAULTS	SOLUTION
Not diffusion aroma.	Check the unit is turned on. If the pump doesn't work, replace the pump.
Small amount of fragrance coming out.	Atomizing head is clogged, run alcohol through the unit for cleaning. Air pump is weak, replace a new air pump.
Spray Liquid	The unit is tilted; atomizing core is damaged, need to replace a new one. Note: That residue may occur around the head of the nebulizer.
Oil spilled at the bottom the of diffuser	Bottle is loose, tighten the bottle.
Abnormal pump sound	Pump is loose, replace pump.