


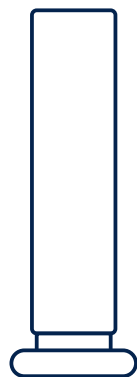

Bluetooth/WiFi



APP Control

Nano  
AtomizationBest quality  
control

# T200

## PRODUCT MANUAL

ACCESSORIES: Product manual, Warranty card, Certification.

please read this instructions carefully and safe-keeping.

## NOTE :




- Do not disassemble the device by yourself;
- Do not tilt or invert equipment that is working and is filled with essential oils;
- Do not use other non-standard power supplies, the device only supports DC 12V adapter, otherwise, it will damage the equipment;
- Do not use the device in extreme environments such as high temperature, excessive moisture or excessive humidity;
- Do not install/place the device in an area that is easily accessible to children;
- When Bluetooth connect the device, it is suggested that within 5 meters, to make sure the data transmission stable.
- When replacing the essential oil, please pay attention to whether the gasket at the bottle mouth installation is detached or damaged.
- If it falls off or is damaged, it should be replaced in time;
- If you do not use the machine for a long time, you should take out the essential oil and unplug the power supply;
- Since the device itself has a certain weight, do not install the device in an unreliable place to prevent it from falling.

## PRODUCT INTRODUCTION

## PRODUCT INTRODUCTION

### Aroma diffuser

### DC Adapter

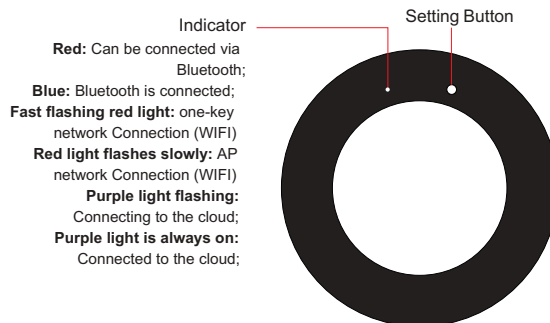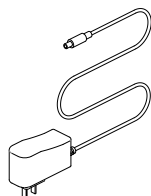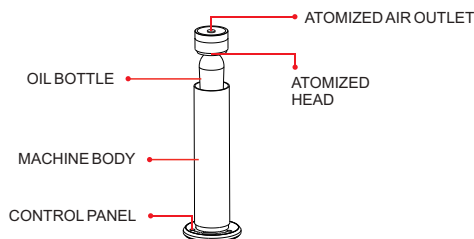

- The indicator light will automatically go out after 30 seconds of inactivity. If the fuel level is low, it will flash a red light once in 10 seconds. Double-click the setting button to activate the indicator light.
- When the light is always on, press and hold the setting button for 3 seconds until the red light flashes, release the button, and follow the APP operation instructions to complete the network connection;
- When the light is always on, long press the setting button for 3 seconds, the red light flashes, do not release it and then long press for 3 seconds until the blue light flashes and release the button to complete the factory reset.

## Product Parameters And Troubleshooting

## Common Troubleshooting

### T200 Basic Parameters

Size	Φ 110mm*H295mm	Bottle capacity	120ml
Supply Voltage	DC12V	Noise	<40db
Power	4W	Weight	1.1kg
Coverage	200m³		
Characteristic	Bluetooth connection,WIFI,split atomizing head		


### Concentration And Consumption (T200)


Grade	1	2	3	4	5	6	7	8	9	10
Working time(s)	7	14	21	28	35	42	49	56	63	70
Interval(s)	103	96	89	82	75	68	61	54	47	40
Atomization amount(g/h)	0.05	0.10	0.15	0.20	0.25	0.30	0.35	0.40	0.45	0.50


Malfunction	Exclude
No atomization	Whether the power supply is connected, air pump is damaged, and the equipment is in working.
Small amount of atomization	Whether the atomization core is blocked or not, and the cleaning equipment confirms; whether the air pump is aging.
Fragrance spray spouting liquid	Whether the equipment is tilted, and essential oil in the bottle overflows the atomizing core.
Essential oil leak	Whether the essential oil bottle is loose, gasket at the mouth of the bottle is damaged, and atomizing head is damaged.
The device emits abnormal noise	Whether the air pump is damaged, check whether there is air outlet or abnormal vibration.
Can't connect to device	Whether the device is connected (red light is on) WIFI connected equipment: Whether the router is compatible with the general mode, please use the AP mode (compatible mode) if the router is not compatible; whether the distance between the router and the device is too far; Bluetooth connected device: Whether the mobile phone is too far away from the device.


## Steps for replacing essential oils


## How to replace atomizer core


**Step 1**  Press the top outlet when head the "click" and release your hand.

**Step 2**  The atomizing head assembly pops up.

**Step 3**  Turn the essential oil bottle clockwise, remove the essential oil bottle for oil replacement, and then turn it counterclockwise to install it back onto the assembly.

**Step 4**  Put the top outlet down into the machine.  
(Note: Align the nozzle and put it in).


**Step 5**  Press the top outlet again; when hear "click" sounds, release your hand.

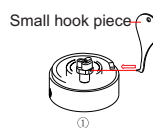

Insert the small hook piece which is shown in the picture into the groove of the atomizer core.



Then pry the small hook piece upwards to unlock and pull out the atomizing core.

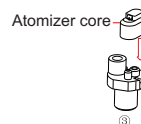

Reinstall the new atomizing core back to its original position.

## App Download Qr Code And Operation



APP download QR code



APP operation guide

## Warranty Card

1. Any belongs to under normal usage circumstance cause because of the product's own quality,customers can bring the card and the machine get the free repair from our company.
2. In normal use conditions,for the causes of manufacturer's fault, we will offer warranty. There is one year warranty since purchase date.
3. The following are no warranty services:
  - The damage caused by natural disaster and accident  
(For example:Conflagration, Earthquake and so on);
  - Don't according to the operational requirement to use;
  - The damage caused by transport improper;
  - Can't provide the warranty card or certificate of content be altered.
4. If maintenance,the guarantee of quality assurance and obligations, the time limit according to the warranty card.

## Warranty Card

- Maintenance records

Maintenance Date	Maintenance Organisation	Maintenance item	Serviceman

Since the date of sale, the product will be free of charge for one year, beyond the scope of warranty, paid maintenance, and lifetime maintenance.

## CERTIFICATION

Product Name: Aroma Diffuser  
Model: T200  
Grade: First Class  
Place of Origin: Guangzhou, China  
Inspectors: \_\_\_\_\_  
Production Date: \_\_\_\_\_