AROMA DIFFUSER A500

D version

PRODUCT MANUAL

Optional screen control/Bluetooth/WIFI/4G

ACCESSORIES: Product manual, Warranty card, Certification

Before using product, please read this instructions carefully and safe-keeping.

- Do not disassemble the device by yourself;
- It is strictly forbidden to tilt or invert the equipment that is working and contains essential oils;
- Do not use other non-standard power supplies. The device only supports DC 12V adapters. otherwise the device will be damaged.
- Do not use this equipment in extreme environments such as high temperature, excessive humidity, and excessive humidity;
- Do not install/place the device in an area where children can easily reach;
- Do not place the device in an area with poor signal to prevent the device from being connected due to problems.
- When connecting to WIFI, please pay attention to adjust the connection mode as needed. Older routers may need AP mode (compatible mode) to connect;
- The Bluetooth connection is recommended to be within five meters to ensure stable data
- Do not add essential oil from the fogging place, otherwise the machine will not be atomized normally, and the serious situation will cause damage to the machine:
- When replacing essential oils, please pay attention to whether the gasket at the bottle mouth installation is off or damaged. If it is off or damaged, it should be replaced in time;
- If the machine is not used for a long time, remove the essential oil and unplug the power supply;
- Since the device itself has a certain weight, please do not install the device in an unstable place to prevent the device from falling.
- It is recommended to clean or replace the atomization core every 3 months

COMMON TROUBLESHOOTING

Malfunction	Exclude		
No atomization	Whether the power supply is connected, air pump is damaged, and the equipment is in working.		
Small amount of atomization	Whether the atomization core is blocked or not, and the cleaning equipment confirms; whether the air pump is aging.		
Fragrance spray spouting liquid	Whether the equipment is tilted, and essential oil in the bottle overflows the atomizing core.		
Essential oil leak	Whether the essential oil bottle is loose, gasket at the mouth of the bottle is damaged, and atomizing head is damaged.		
The device emits abnormal noise	Whether the air pump is damaged, check whether there is air outlet or abnormal vibration.		
Can't connect to device	Whether the positioning and Bluetooth permissions of mobile phones and apps are enabled: WIFI connection device: Do you prioritize using Bluetooth "de network" to connect to the router or AP compatible network in the WIFI option; Bluetooth connected devices: Is the phone too far away from the device; 4G network connected devices: whether the installation environment signal of the device is blocked.		

PRODUCT PARAMETERS


Size	85mm*85.6mm*271mm	Characteristic	Screen control/APP control/Low noise
Rated voltage	DC12V	Weight	640g
Power	5W	Coverage	500m³
Atomization	1.8g/h	Essential oil capacity	300ml

CONCENTRATION AND CONSUMPTION

A500 Atomization

The above is specific essential oil data for laboratory environment testing, for reference only

Panel Description

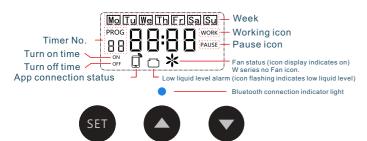

PANEL AND OPERATION INSTRUCTIONS




A-Start Page



B-Standby page



C-Clock Settings Page



- -Turn on and display the current device clock/week.Fan on status, device atomization/pause,Oil level status -Long press ▼ to turn on/off the fan
- -Tap A to quickly enter and adjust the current Nebulization concentration setting page
- -[Page A] Automatically enter without operation for
- -Display the current device operation number during
- the time period, Fog/pause countdown seconds -Only display OFF outside the time period
- -Tap SET to return to page A
- -[Page A] Long press SET to enter -Tap SET to select the adjustment position
- -Tap ▼ / ▲ Adjust Values
- -Long press SET to save and return to page A
- [Page A] Tap SET to enter
- -Tap ▼ / ▲ adjust the serial number, Not displaying (ON/OFF) indicates that the sequence number is timed No data set for device -Long press 🔻 to delete the timer data
- -Tap SET to adjust the timer data

D-Timer No. selection page


[C/D/E/F/G Page] You can long press SET to save data and return to [A Page]

PANEL AND OPERATION INSTRUCTIONS



-[D Page] Tap SET to enter -Tap SET to select the adjustment position -Tap ▼ / ▲ Adjust Values

E-Time period setting page



- -[E Page]Tap SET to enter
- -Tap v to select the adjustment position
- -Tap A to adjust values (framed as weekdays)

F-Weekday selection page



-[F Page] Tap SET to enter -Tap ▼ / ▲ Adjust Values

-Tap SET to switch between "WORK" and" PAUSE" Or return to page D

G-Concentration ratio setting page



 Locked or connected by mobile annBluetooth/WIFI automatic entry

- T Flashing indicates that the screen has been locked by the APP

- OFF Display indicates that the device is in the non working timer

H-APP Connected Locked screen page

HOW TO INSTALL


A.REPLACE ESSENTIAL OIL


1. Insert the key into the concave position, slightly push it inward and turn the door cover 90 ° to the left



atomizing head component horizontally.








4. Slide the atomizing head smoothly through the sliding groove and ensure that the atomizing head's air hole is accurately inserted into the device's air outlet. After that, rotate the door cover 90 degrees to the right and hear a "click" sound to complete the locking process.


HOWTO INSTALL

B.WALL MOUNTED INSTALLATION








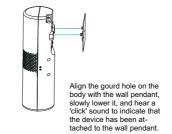

PRODUCT OVERVIEW

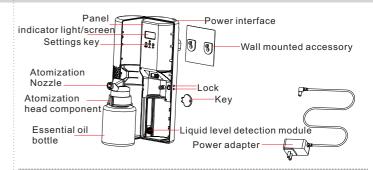

APP DOWNLOAD OR CODE AND OPERATION





APP operation guide

WARRANTY CARD

1. Any belongs to under normal usage circumstance cause because of the product's own quality, customers can bring the card and the machine get the free repair from our company.

- 2. In normal use conditions for the causes of manufacturer's fault, we will offer warranty. There is one year warranty since purchase date.
- 3. The following are no warranty services:
- The damage caused by natural disaster and accident (For example: Conflagration, Earthquake and so on);
- •Don't according to the operational requirement to use;
- •The damage caused by transport improper;
- •Can't provide the warranty card or certificate of content be altered.
- 4. If maintenance, the guarantee of quality assurance and obligations, the time limit according to the warranty card.

WARRANTY CARD

Maintenance records

Maintenance Date	Maintenance Organisation	Maintenance item	Serviceman

Since the date of sale, the product will be free of charge for one year, beyond the scope of warranty, paid maintenance, and lifetime maintenance

CERTIFICATION

Product Name: Aroma Diffuser

Grade: First Class

Place of Origin: Guangzhou, China

Inspectors:_

Model: A500

Production Date: