AROMA DIFFUSER C200

PRODUCT MANUAL

ACCESSORIES: Product manual Warranty card Certification

Product parameters

Power	2W	Panel color	Black, white, customized	
Weight	1.15kg	Coverage	200 Cubic meter	
Noise	<50db	Size	W215mm×D63mm×H191mm	
Rated voltage	DC4V~5V	Power supply	USB DC5V or 3*D size battery	
Essential oil capacity	100mL	Essential oil type	pure essential oil (Recommended viscosity <18mpa.s	

Concentration and Consumption

Grade	1	2	3	4	5	6	7	8	9	10
Interval (sec)	240	225	210	195	180	165	150	135	120	105
Grade	11	12	13	14	15	16 17 18 19 20 Adjust in USB charge mode				
Interval (sec)	90	75	60	45	30	25	20	15	10	5

- 1. When no external USB 5V power supply, the maximum can only be
- 2. The atomization duration is 3 seconds;
- 3.100ml essential oil can be atomized about 50,000 times, different flavors will be different .

Before using product, please read this instructions carefully and safe-keeping.

- Please avoid the equipment from touching extreme environments such as water, fire, moisture, etc.
- 2. Please avoid the device falling or hitting with external force
- Do not open the device by yourself
 Do not invert or tilt the device after it is loaded with essential oil to prevent the essential oil from leaking out.
- 5. The device only supports USB5V (Note: USB5V power needs to be purchased separately, if necessary, please contact the dealer) or Three D size batteries, using a non-standard power supply will invert the device damage
- 6. This product is not toys, please do not let children touch 7. If you do not use this product for an extended period of time, unplug it or remove the battery.

Common troubleshooting

Malfunction	Exclude			
No atomization	Whether the power turn on or not, the battery has power or not, and the air pump is damaged or not.			
Small amount of atomization	Whether the atomization core is blocked or not, and the cleaning equipment confirms; whether the air pump is aging.			
Fragrance spray Spouting liquid	Whether the device is inclined or not, and the atomization head is damaged.			
Essential oil leak	Check the essential oil bottle loose or not.			
The device emits abnormal noise	Check the air pump loose or not			

Battery comsumption schedule

Working ho	our(10 Hours/Day)	Working hour(15 Hours/Day)		
Grade	Lifetime(Days)	Grade	Lifetime(Days)	
15	45	15	30	
14	67	14	50	
13	90	13	66	
12	112	12	82	

- 1. It is recommended to use alkaline Nanfu No. 1 D size battery
- (please use qualified battery with reliable quality and stable capacity).

 2. Different use environments and flavors will have some impact on battery life. The data is for reference only.

Battery testing

Light up the screen

Long press UP button to display power information (7 grid power)


Press ENT to exit



Low battery display Power detection is 0 grid, the red light is in the upper left corner

Note: As the battery power will be back pressure, when there is a critical detection threshold, there will be a light-off alternation

Product Overview

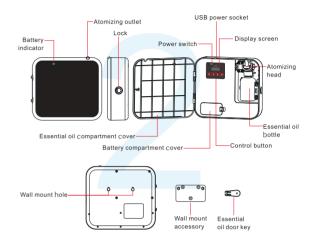


Basic operation brief

Light up the screen	When Power on, machine will be in the ON mode. When the screen is blanked out, touch SET once. If machine in the OFF mode, Slide the power switch to the le		
Time setting	In bright screen mode, long press SET (about 3 seconds) to enter the setting mode, DOWN selects required setting items, press UP button to adjust parameters		
Working hours setting (Week day & Time & Grade)	In bright screen mode, touch the SET button once to enter the setting mode, there are 5 working segments, each segment can be set separately: Working period, workday selection and grade selection		
Restore factory setting	In the bright screen state, tong press the ENT (about 3 seconds) to complete the time recovery (Segment 1: Time is 12:00PM, the grade is 10, work all week day, work from 7:00 to 21:00 every day, Other segment: all in 0.		
Off screen Status	When in the ON mode,Press the ENT to return to the initial light screen mode, the device will automatically shut out the screen after 5 seconds		
Enter the OFF mode (OFF mode means stop Machine mode, the device is not atomized)	Slide the power switch to the right. Enter OFF mode.		
Restore ON mode (ON mode means the device is working)	In the power-on state and in the OFF mode, Slide the power switch to the left. Enter ON mode.		

Note: when multiple segment time overlap, the grade position is based on minimum the set value of the segment number,


Replace oil bottle

- Take the key clockwise to open the right lock
- Slide the gas nozzle at the connection with the atomization head to the left

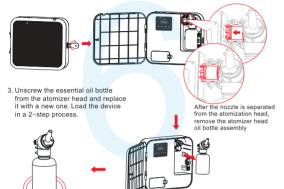

Wall mount installation

1. Fix the wall mount accessory on the wall with screws

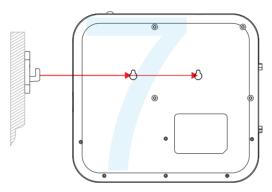

The hanging hole on the back of the device can be hooked on the hook

Maintenance records

Maintenance Date	Maintenance Organisation	Maintenance item	Serviceman	

Our company provide one year free repair free repair after the equipment has been sold, beyond one year we offer paid repair and lifelong maintenance.

CERTIFICATION

Product Name Aroma Diffuser

Model: C200

Grade:First Class

Place of Origin:

Inspectors:

Production Date:

WARRANTY CARD

- Any belongs to under normal usage circumstance cause because of the product's own quality,customers can bring the card and the machine get the free repair from our company.
- In normal use conditions, for the causes of manufacturer's fault, we will offer warranty.There is one year warranty since purchase date.
- 3. The following are no warranty services:
- □ •The damage caused by natural disaster and accident (For example:Conflagration, Earthquake and so on);
- □ •Don't according to the operational requirement to use;
- □ •The damage caused by transport improper;
- □ •Can't provide the warranty card or certificate of content be altered.
- If maintenance, the guarantee of quality assurance and obligations, the time limit according to the warranty card.