AROMA DIFFUSER H2000

D version

PRODUCT MANUAL

Optional screen control/Bluetooth/WIFI/4G

ACCESSORIES: Product manual, Warranty card, Certification

Before using product, please read this instructions carefully and safe-keeping.

- Do not disassemble the device by yourself;
- It is strictly forbidden to tilt or invert the equipment that is working and contains essential oils;
- Do not use other non-standard power supplies. The device only supports DC 12V adapters, otherwise the device will be damaged.
- Do not use this equipment in extreme environments such as high temperature, excessive humidity, and excessive humidity;
- Do not install/place the device in an area where children can easily reach;
- Do not place the device in an area with poor signal to prevent the device from being connected due to problems.
- When connecting to WIFI, please pay attention to adjust the connection mode as needed. Older routers may need AP mode (compatible mode) to connect;
- The Bluetooth connection is recommended to be within five meters to ensure stable data
- Do not add essential oil from the fogging place, otherwise the machine will not be atomized normally, and the serious situation will cause damage to the machine:
- When replacing essential oils, please pay attention to whether the gasket at the bottle mouth installation is off or damaged. If it is off or damaged, it should be replaced in time:
- If the machine is not used for a long time, remove the essential oil and unplug the power supply;
- Since the device itself has a certain weight, please do not install the device in an unstable place to prevent the device from falling.
- It is recommended to clean or replace the atomization core every 3 months

COMMON TROUBLESHOOTING

Malfunction	Exclude	
No atomization	Whether the power supply is connected, air pump is damaged, and the equipment is in working.	
Small amount of atomization	Whether the atomization core is blocked or not, and the cleaning equipment confirms; whether the air pump is aging.	
Fragrance spray spouting liquid	Whether the equipment is tilted, and essential oil in the bottle overflows the atomizing core.	
Essential oil leak	Whether the essential oil bottle is loose, gasket at the mouth of the bottle is damaged, and atomizing head is damaged.	
The device emits abnormal noise	Whether the air pump is damaged, check whether there is air outlet or abnormal vibration.	
Can't connect to device	Whether the positioning and Bluetooth permissions of mobile phones and apps are enabled: WIFI connection device: Do you prioritize using Bluetooth "de network" to connect to the content of the connected devices: Is the phone too far away from the device; 4G network connected devices: Is the phone too far away from the device; 4G network connected devices: whether the installation environment signal of the device is blocked.	

PRODUCT PARAMETERS

Size	150mm*130mm*626mm	Characteristic	Screen control/APP control/Low noise
Rated voltage	DC12V/2A	Weight	7.3kg
Power	10W	Coverage	2000m³
Atomization	0.5-4.25g/h	Essential oil capacity	1000ml

CONCENTRATION AND CONSUMPTION

Panel Description

App connection status

H2000 4.25 3.8 3.35 2.9 2.45 2 1.625 1.25 0.875 0.5

The above is specific essential oil data for laboratory environment testing, for reference only

Mo Tu We Th Fr Sa Su

— ON — OFF

PAUSE - Pause icon

W series no Fan icon

Bluetooth connection indicator light

Low liquid level alarm (icon flashing indicates low liquid level)

PANEL AND OPERATION INSTRUCTIONS



A-Start Page



B-Standby page



C-Clock Settings Page



- -Turn on and display the current device clock/week.Fan on status, device atomization/pause,Oil level status
- -Long press v to turn on/off the fan -Tap A to quickly enter and adjust the current
- Nebulization concentration setting page
- -[Page A] Automatically enter without operation for 10 seconds
- -Display the current device operation number during
- the time period, Fog/pause countdown seconds -Only display OFF outside the time period
- -Tap SET to return to page A
- -[Page A] Long press SET to enter -Tap SET to select the adjustment position
- -Tap ▼ / ▲ Adjust Values -Long press SET to save and return to page A
- [Page A] Tap SET to enter
- -Tap ▼ / ▲ adjust the serial number, Not displaying (ON/OFF) indicates that the sequence number is timed No data set for device
- -Long press V to delete the timer data -Tap SET to adjust the timer data

D-Timer No. selection page

[C/D/E/F/G Page] You can long press SET to save data and return to [A Page]

PANEL AND OPERATION INSTRUCTIONS



- -[D Page] Tap SET to enter
- -Tap SET to select the adjustment position
- -Tap ▼ / ▲ Adjust Values

E-Time period setting page

Mo Tu We Th Fr Sa Su 09

- -[E Page]Tap SET to enter
- -Tap ▼ to select the adjustment position
- -Tap A to adjust values (framed as weekdays)

F-Weekday selection page



- -[F Page] Tap SET to enter -Tap ▼ / ▲ Adjust Values
- -Tap SET to switch between "WORK" and" PAUSE" Or return to page D

G-Concentration ratio setting page




- -Locked or connected by mobile annBluetooth/WIFI automatic entry
- Tlashing indicates that the screen has been locked by the APP
- OFF Display indicates that the device is inWithin
- the non working timer


H-APP Connected -Locked screen page

REPLACE ESSENTIAL OIL

PRODUCT OVERVIEW

APP DOWNLOAD QR CODE AND OPERATION

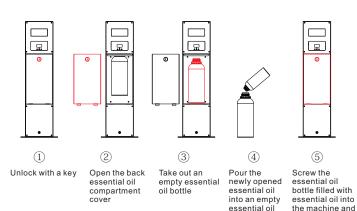

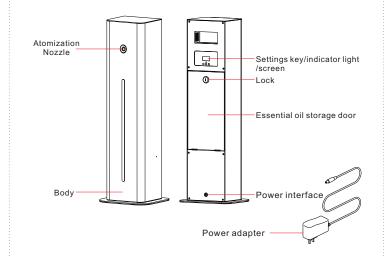





PP download QR code

APP operation guid

WARRANTY CARD

- 1. Any belongs to under normal usage circumstance cause because of the product's own quality, customers can bring the card and the machine get the free repair from our company.
- 2. In normal use conditions, for the causes of manufacturer's fault, we will offer warranty. There is one year warranty since purchase date.
- 3. The following are no warranty services:
- •The damage caused by natural disaster and accident (For example:Conflagration, Earthquake and so on);
- •Don't according to the operational requirement to use;
- •The damage caused by transport improper;
- •Can't provide the warranty card or certificate of content be altered.
- 4. If maintenance, the guarantee of quality assurance and obligations, the time limit according to the warranty card.

WARRANTY CARD

Maintenance records

compartment

Maintenance Date	Maintenance Organisation	Maintenance item	Serviceman

Since the date of sale, the product will be free of charge for one year, beyond the scope of warranty, paid maintenance, and lifetime maintenance.

CERTIFICATION

Product Name: <u>Aroma Diffuser</u> Model: H2000

Grade: First Class

Place of Origin: Guangzhou, China

Inspectors:

Production Date: